

FIG. 1

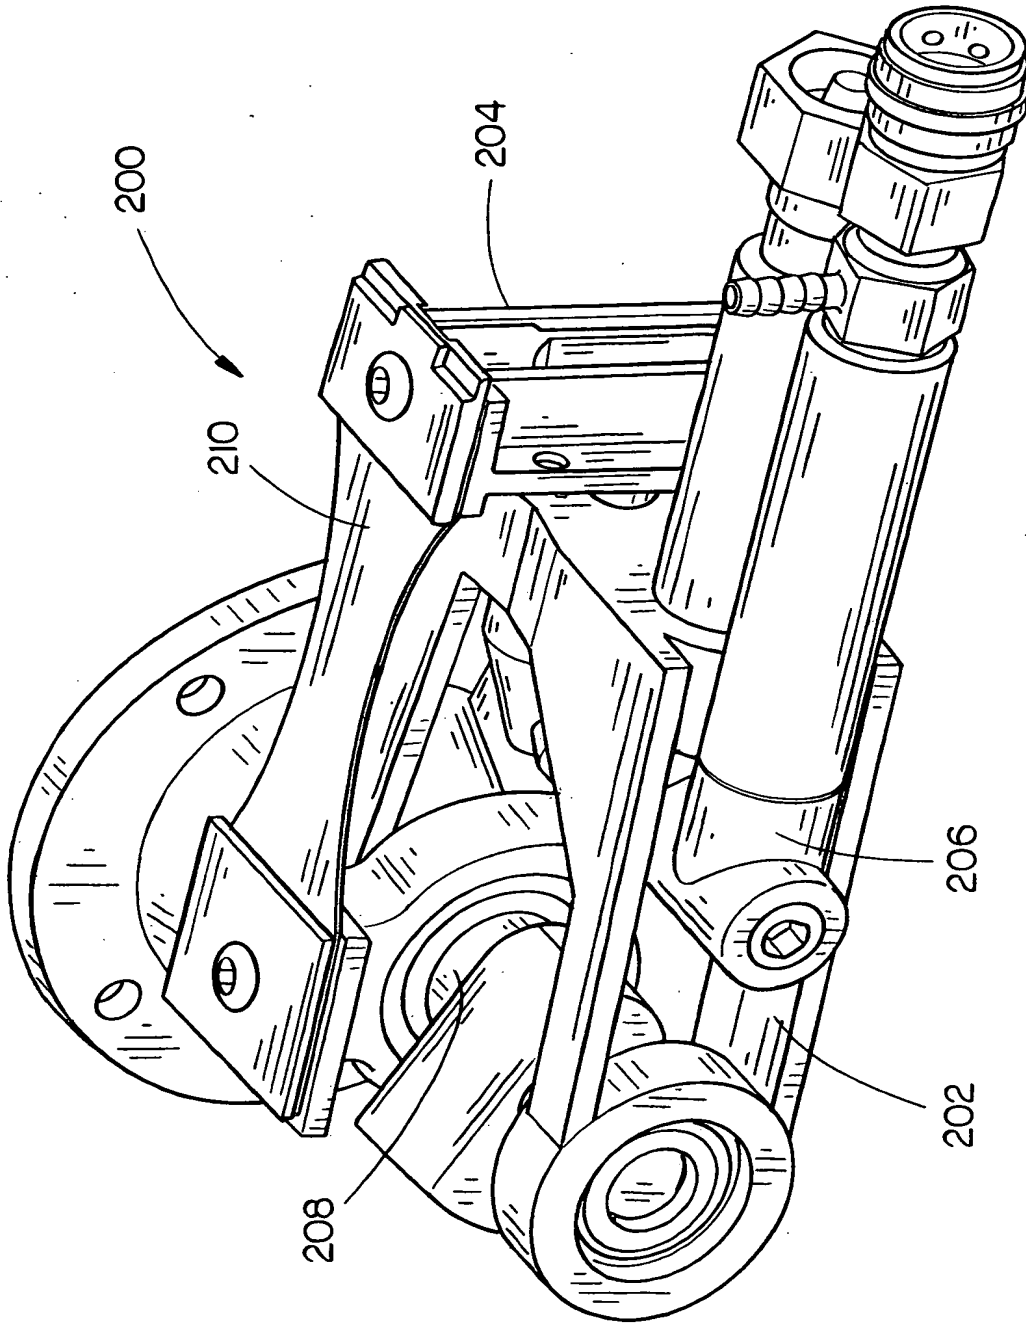


FIG. 2

2010ED 6582800T

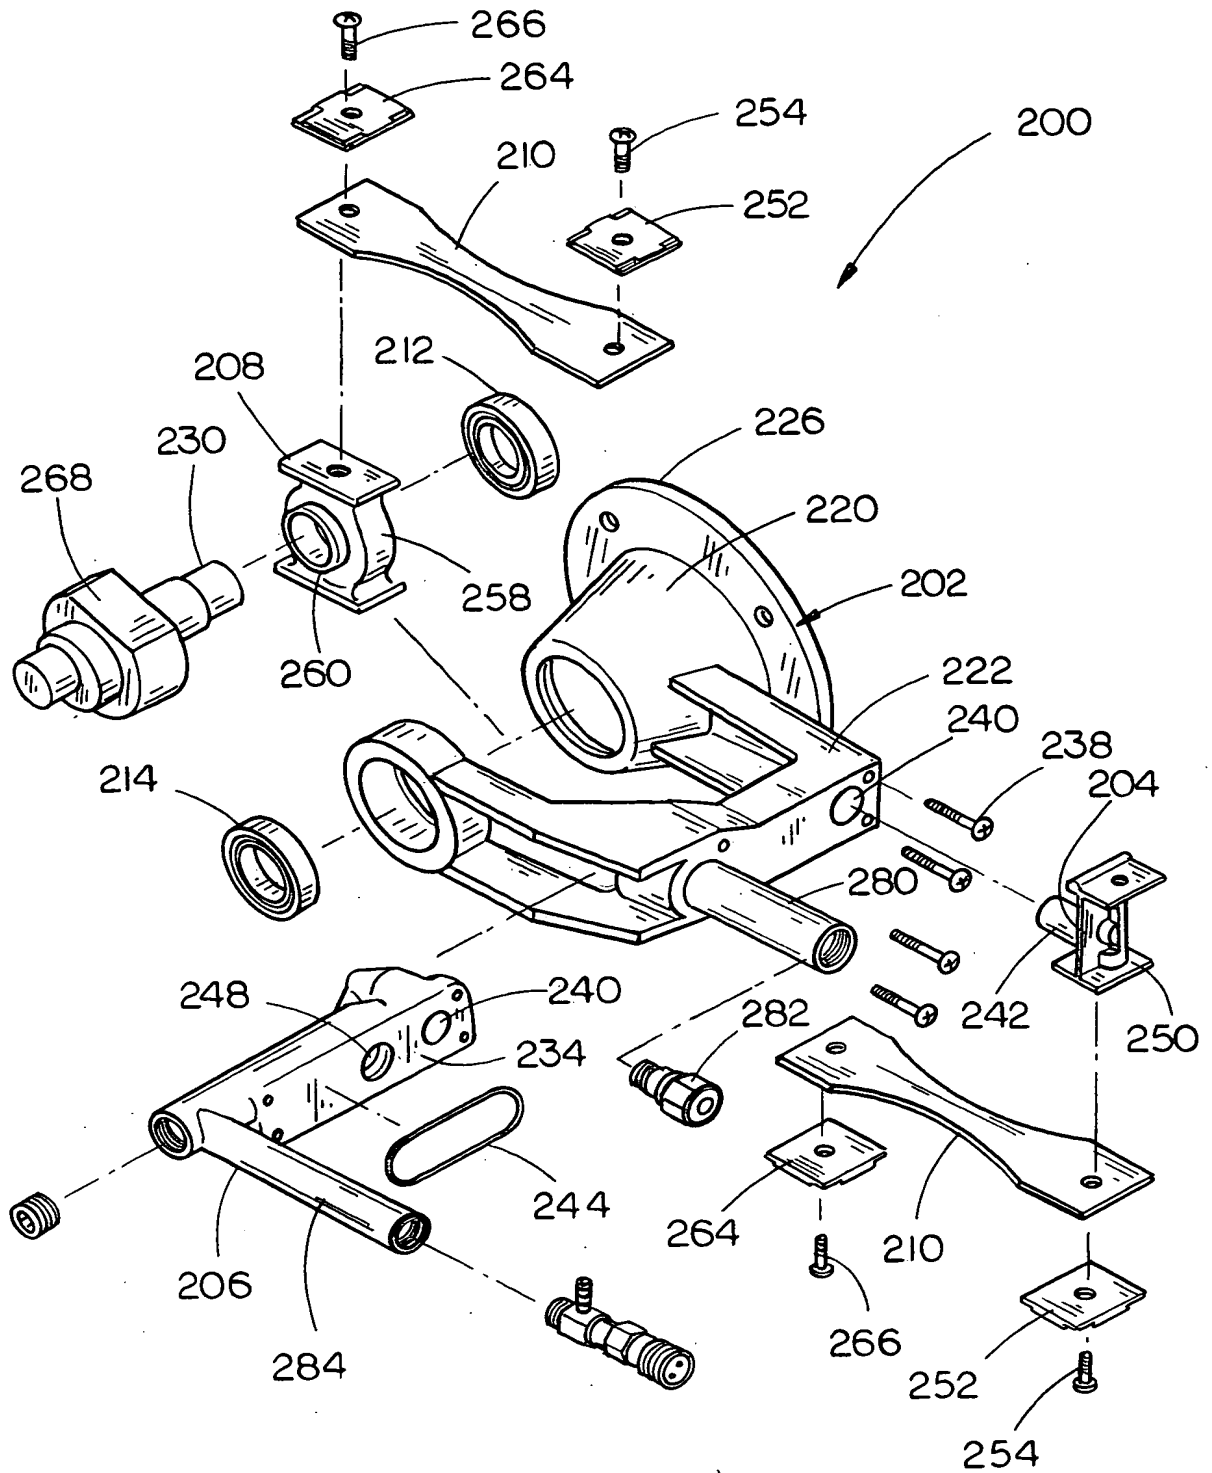


FIG. 3

10087899-030102

10087899.030102

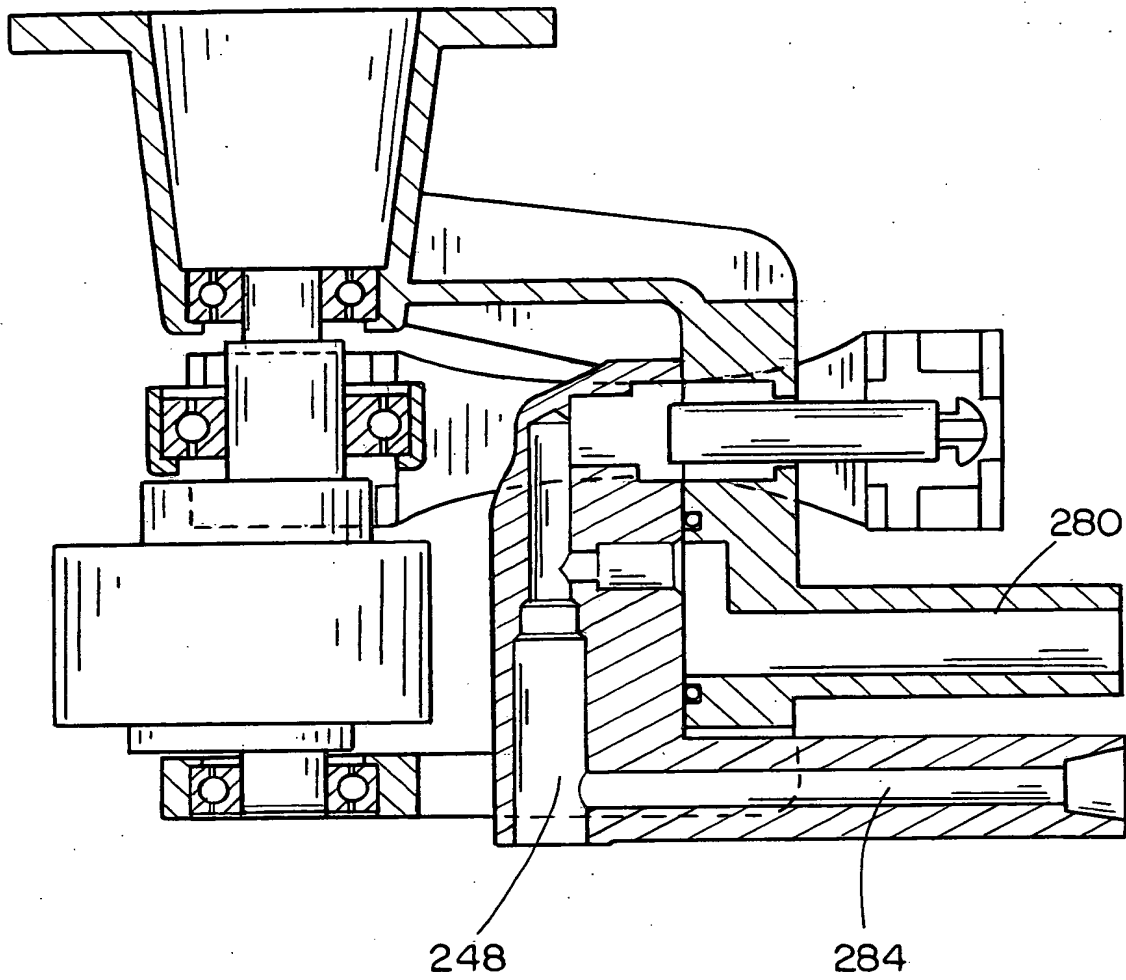


FIG. 4

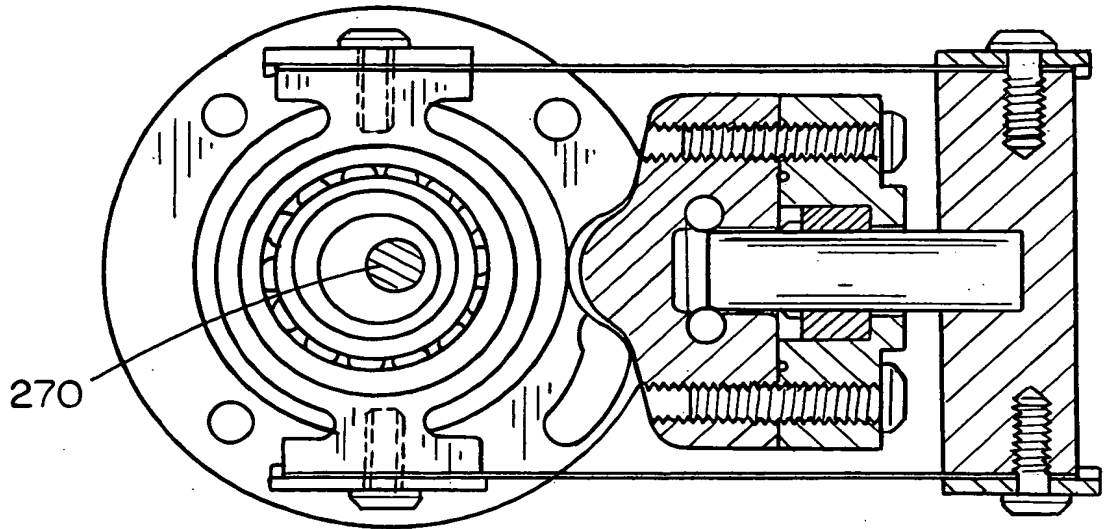


FIG. 5A

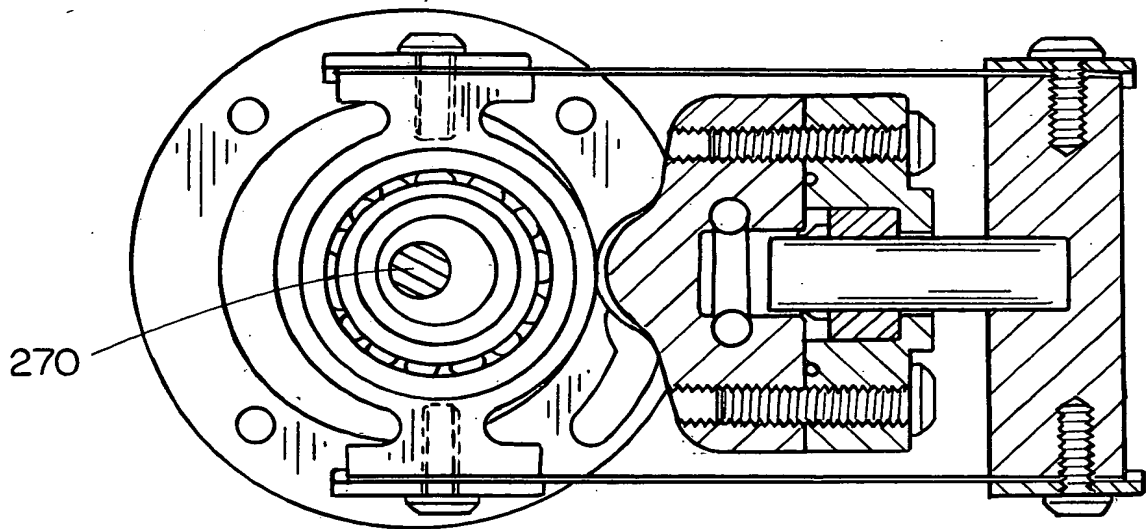


FIG. 5B

10087899.030102

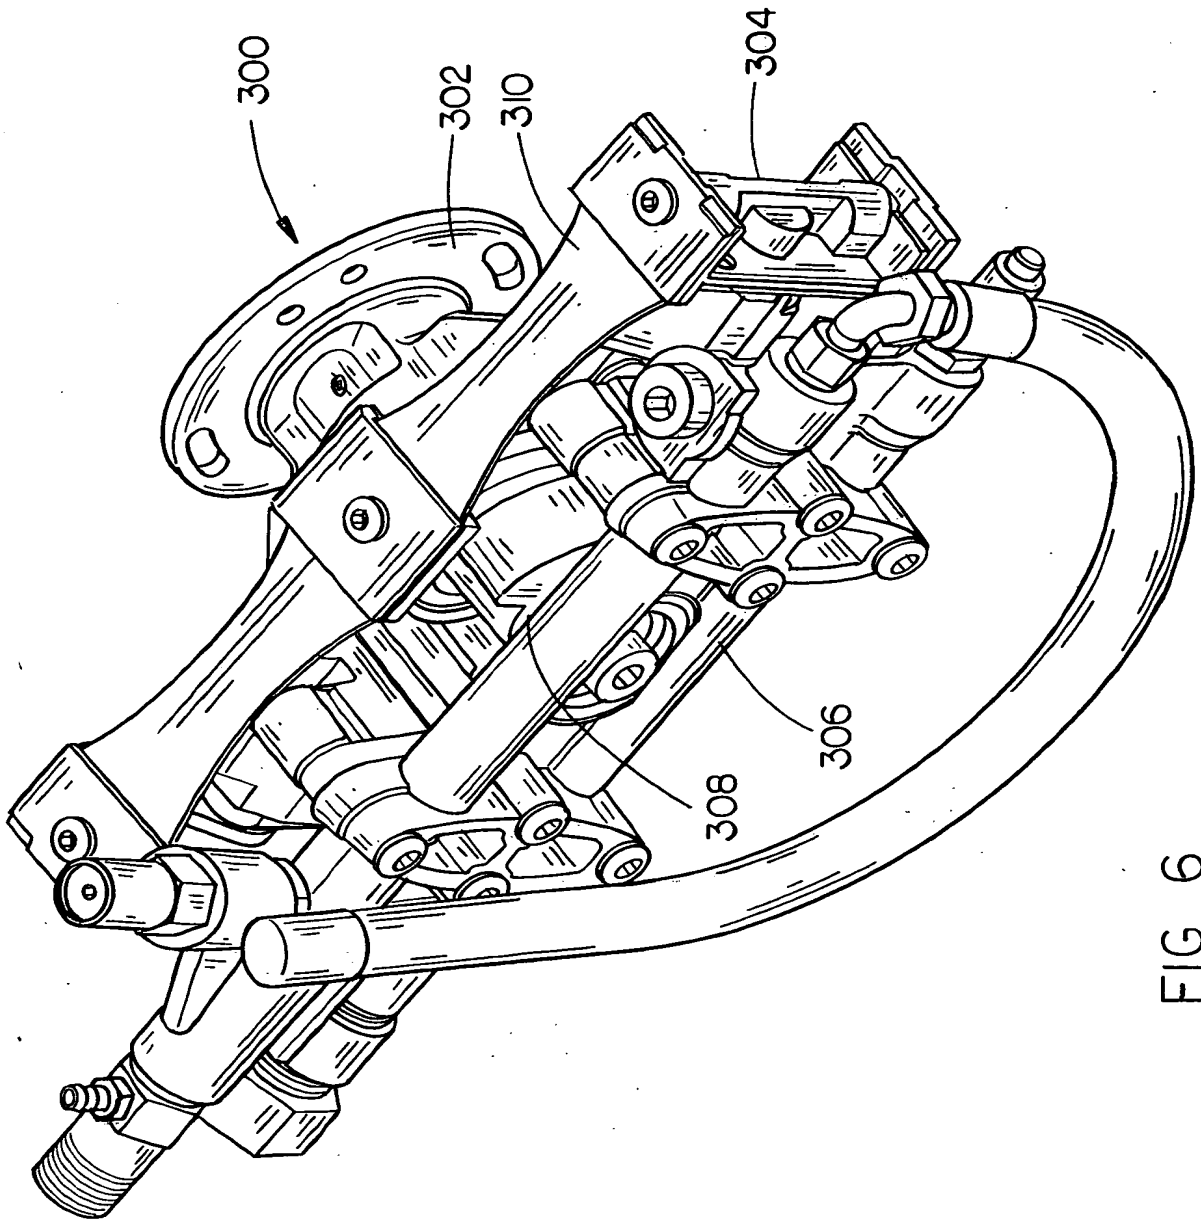


FIG. 6

201020" 66848001


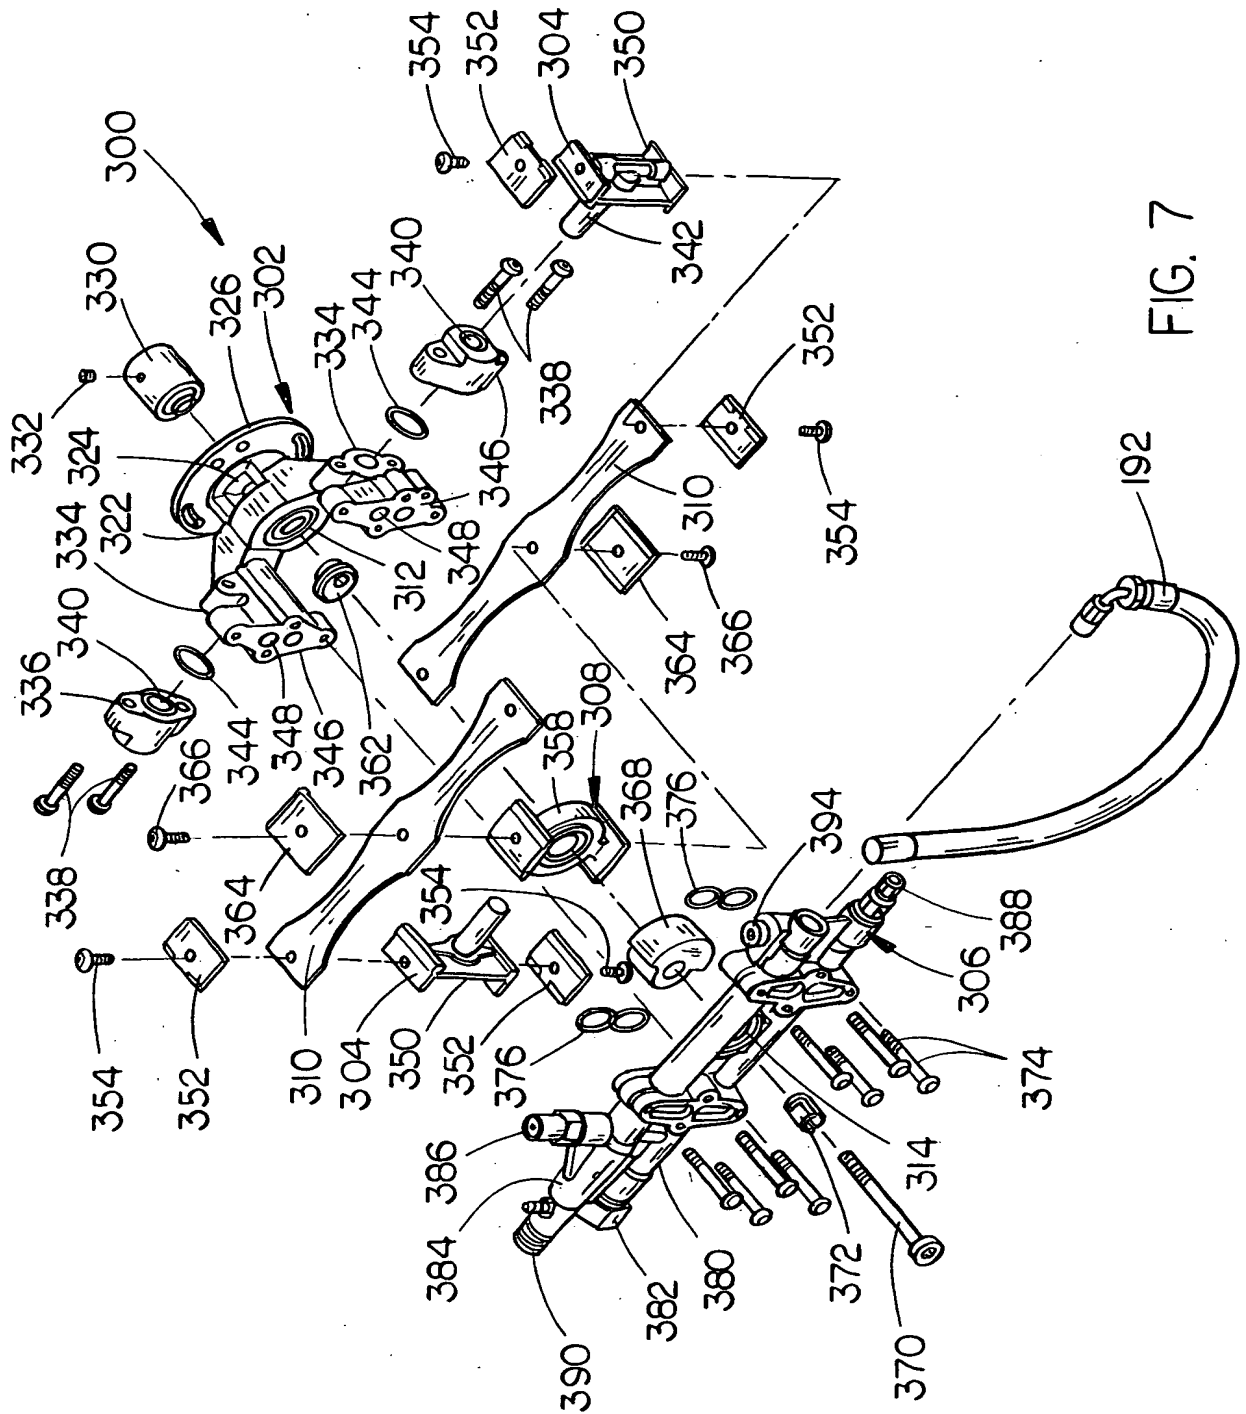


FIG. 7

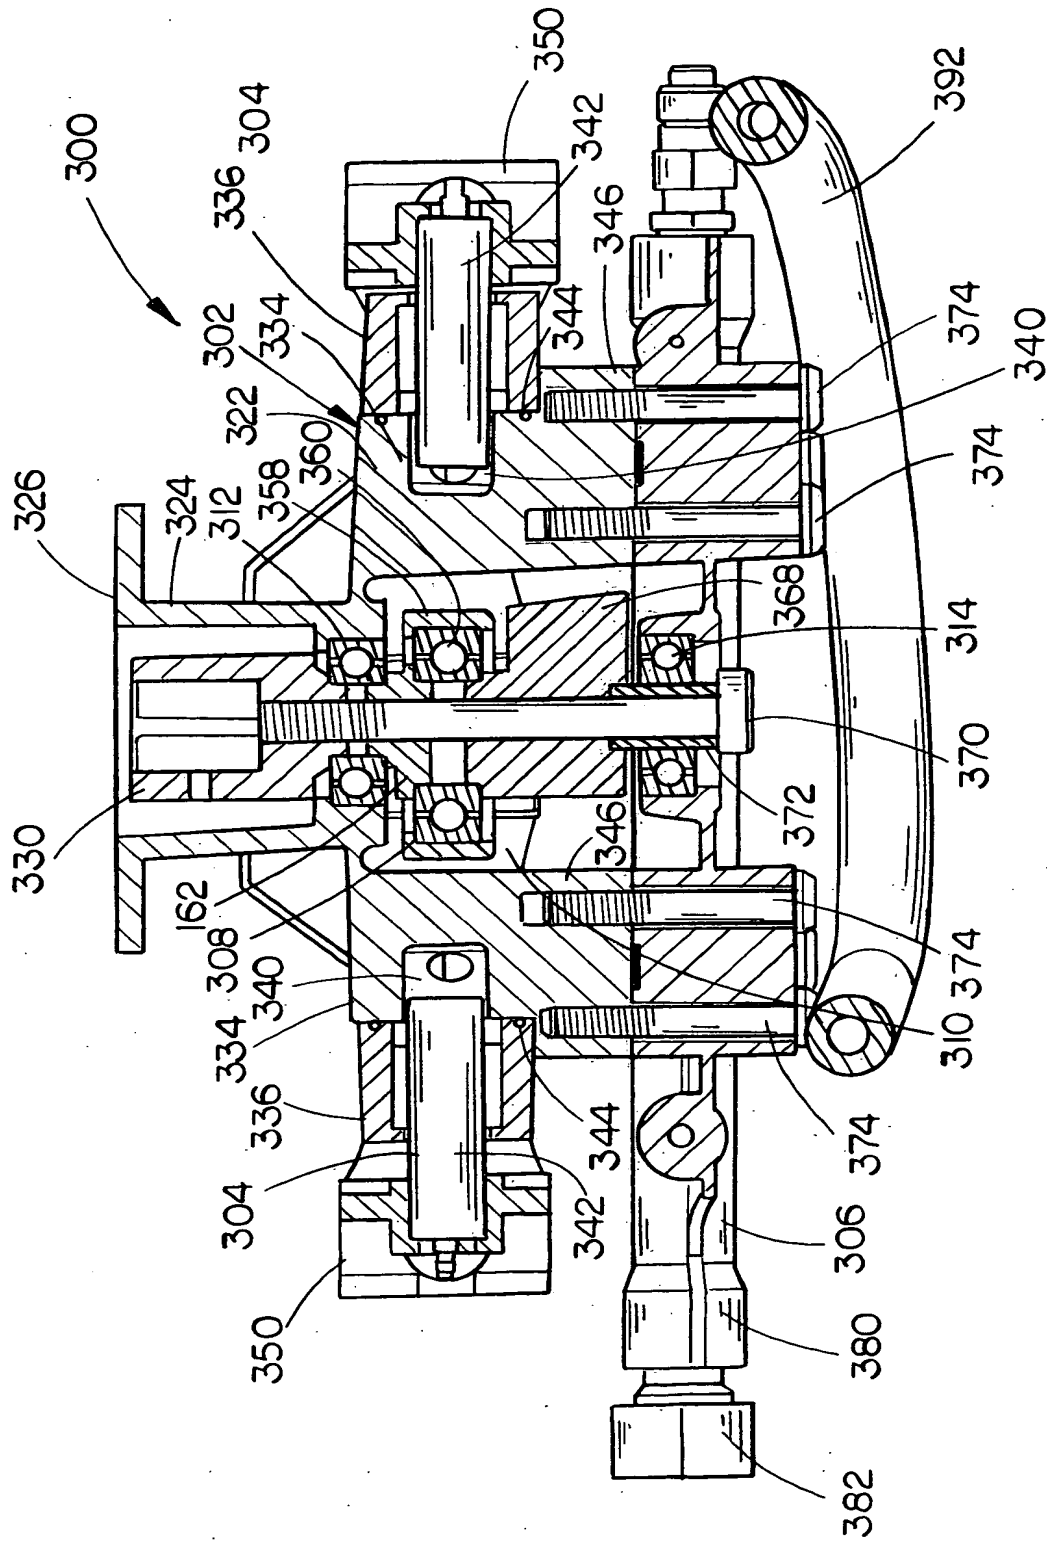

ფ.გ.





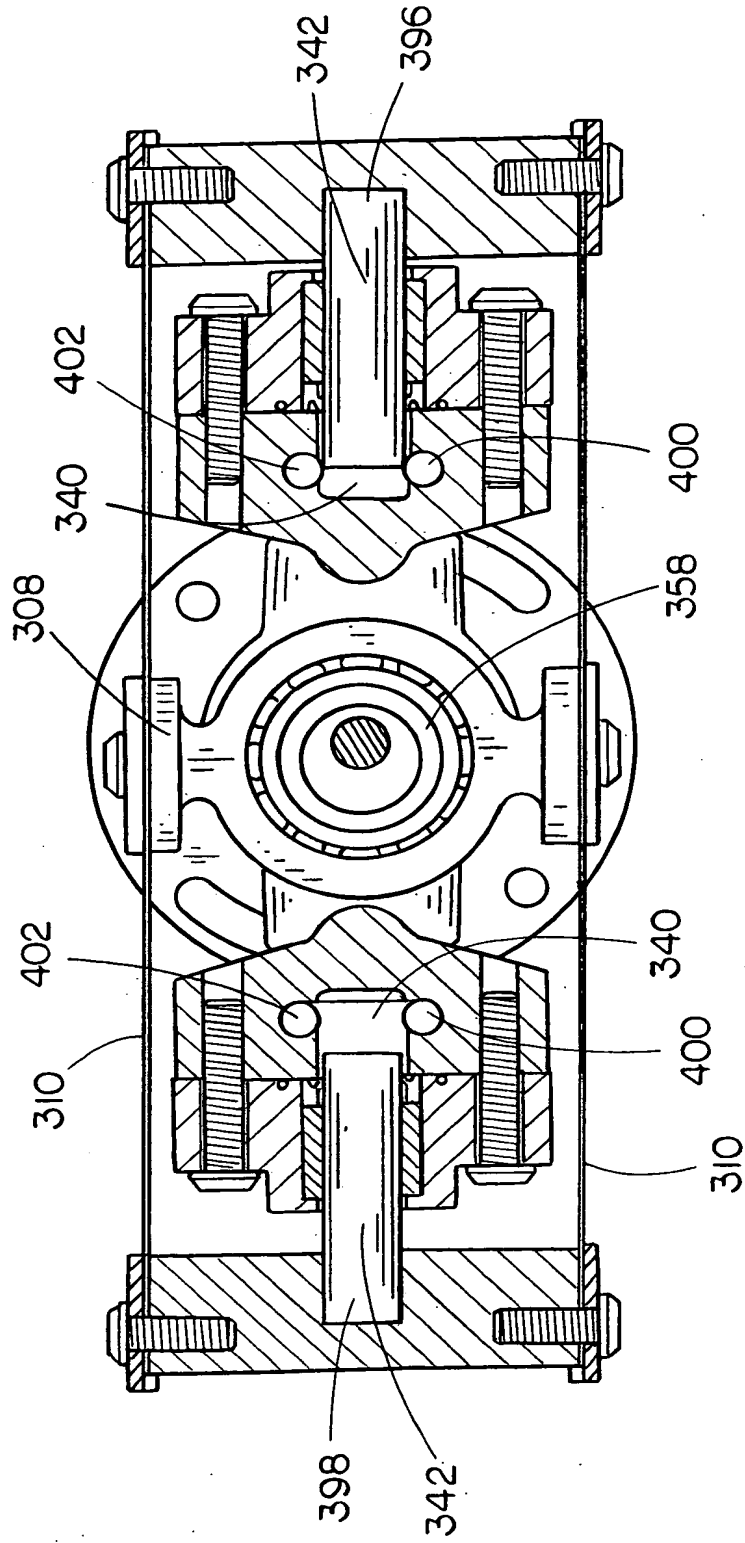


FIG. 9A

2010E0" 6682800T



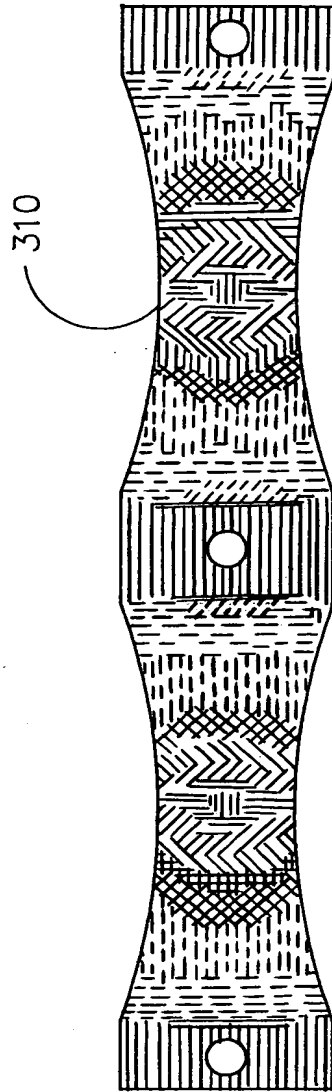

UNITS = INCH POUND SECOND (IPS)










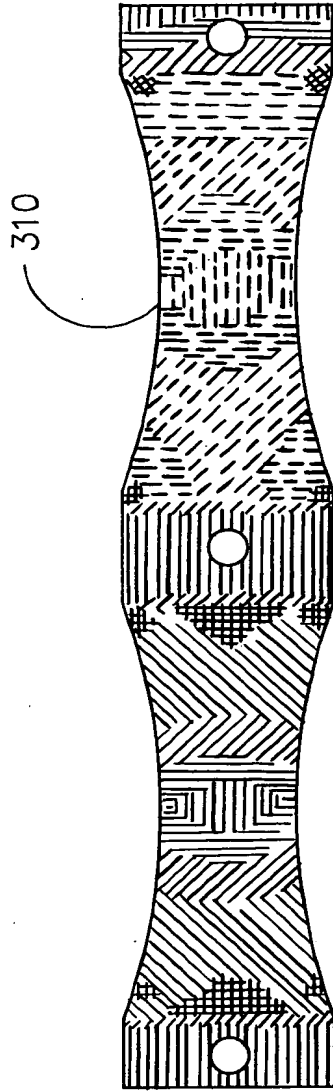
	$0.000e + 00 - 1.595e + 03$		$7.974e + 03 - 9.569e + 03$
	$1.595e + 03 - 3.190e + 03$		$9.569e + 03 - 1.116e + 04$
	$3.190e + 03 - 4.785e + 03$		$1.116e + 04 - 1.276e + 04$
	$4.785e + 03 - 6.379e + 03$		$1.276e + 04 - 1.435e + 04$
	$6.379e + 03 - 7.974e + 03$		

FIG. 10A



UNITS = INCH POUND SECOND (IPS)










	$0.000e + 00 - 2.904e + 03$		$1.452e + 04 - 1.743e + 04$
	$2.904e + 03 - 5.809e + 03$		$1.743e + 04 - 2.033e + 04$
	$5.809e + 03 - 8.713e + 03$		$2.033e + 04 - 2.324e + 04$
	$8.713e + 03 - 1.162e + 04$		$2.324e + 04 - 2.614e + 04$
	$1.162e + 04 - 1.452e + 04$		

FIG. 10B

2010020" 668/8007

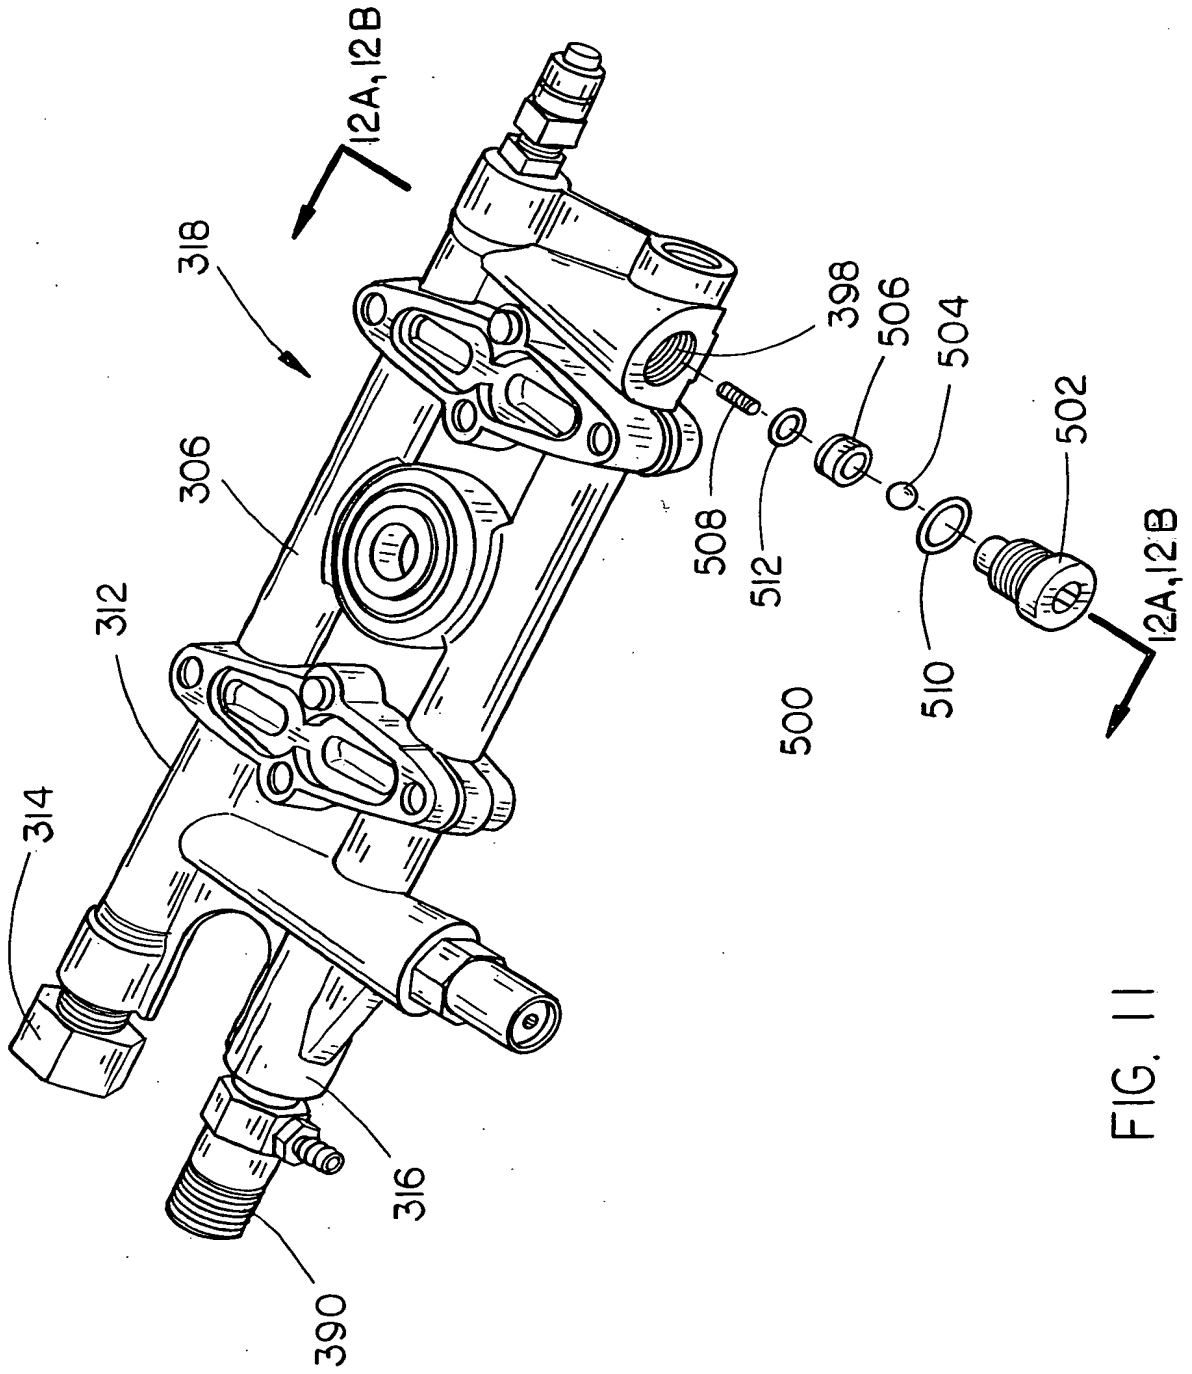


FIG. 11

20T020" 668/800T

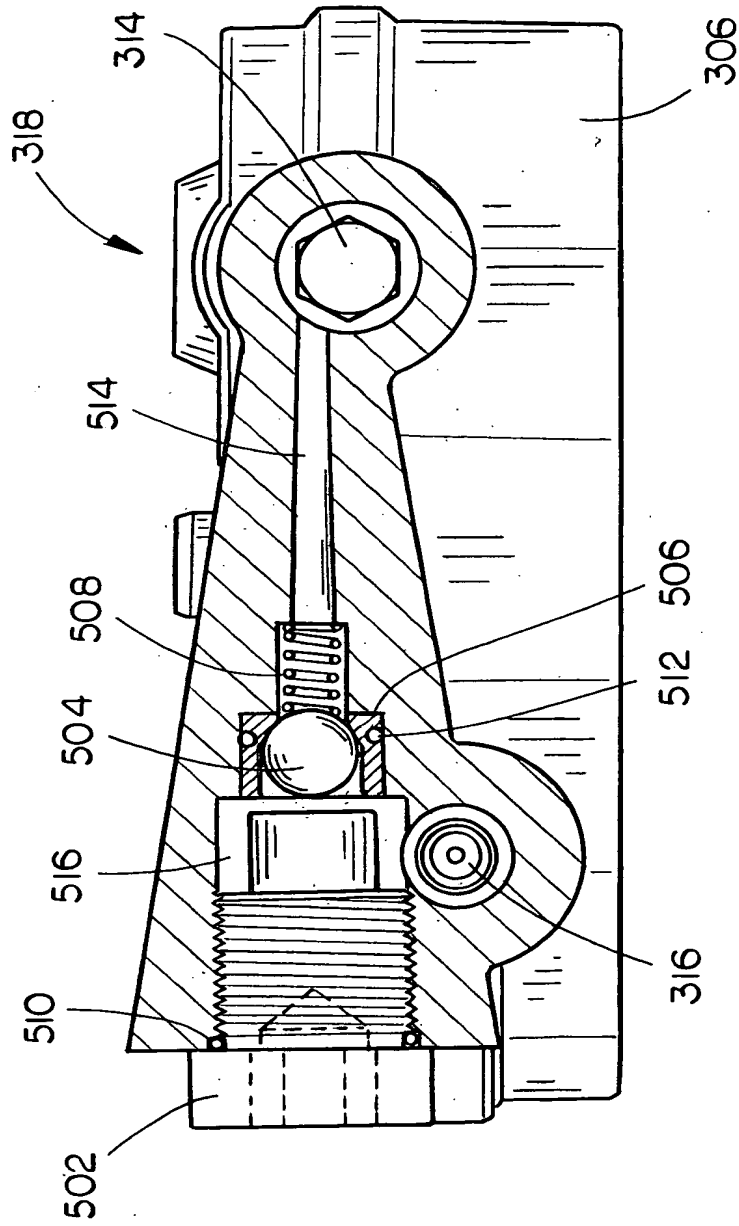


FIG. 12A



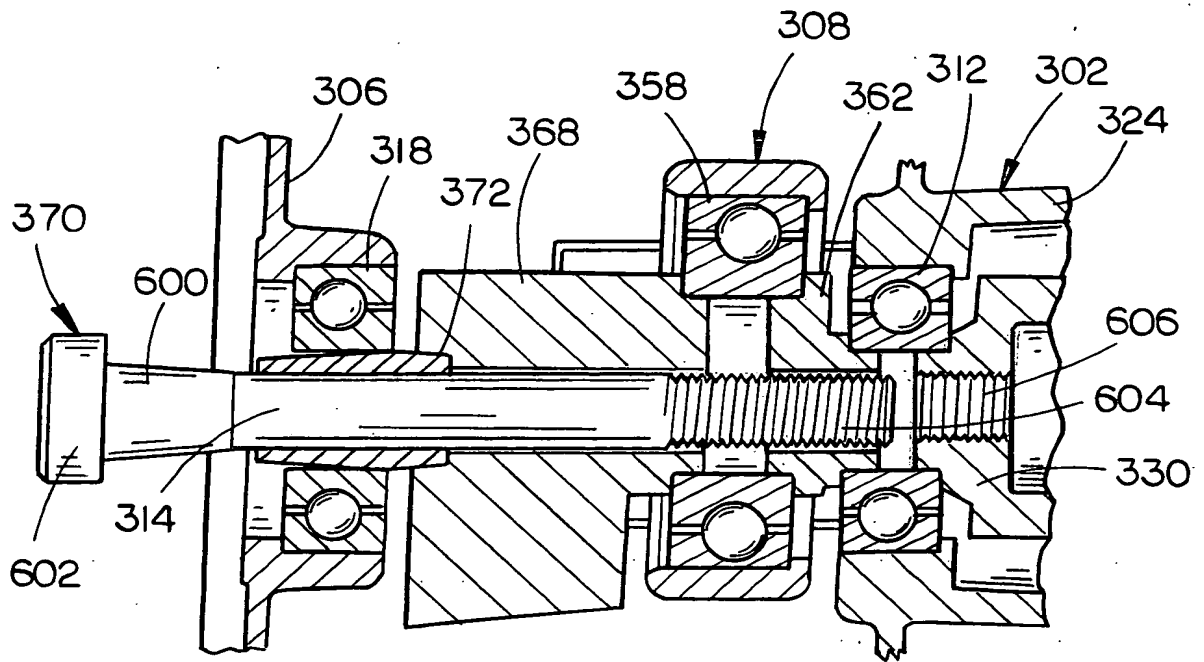


FIG. 13

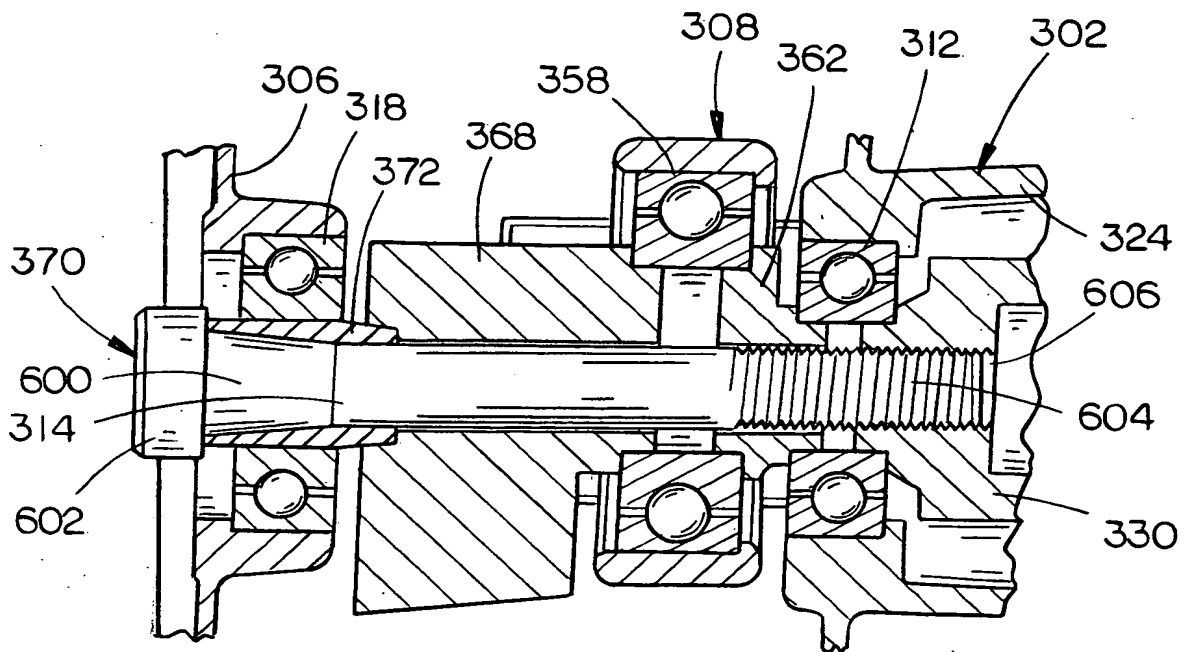


FIG. 14

10087899.030102  
201001-66878001



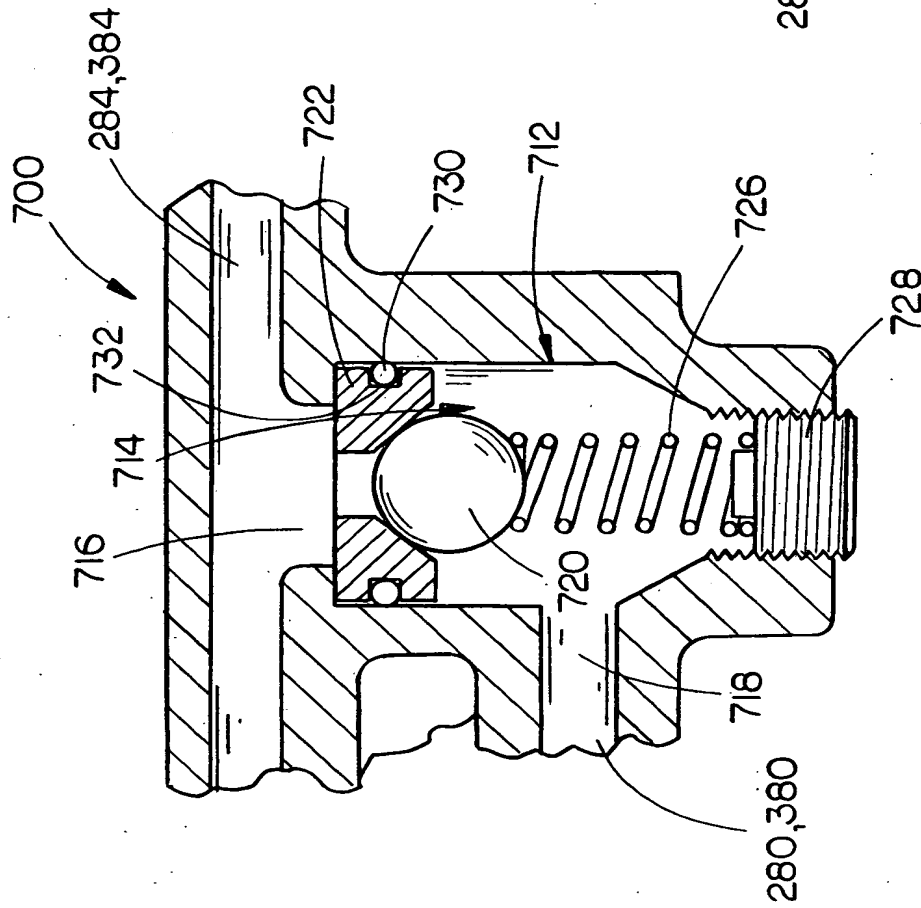


FIG. 15

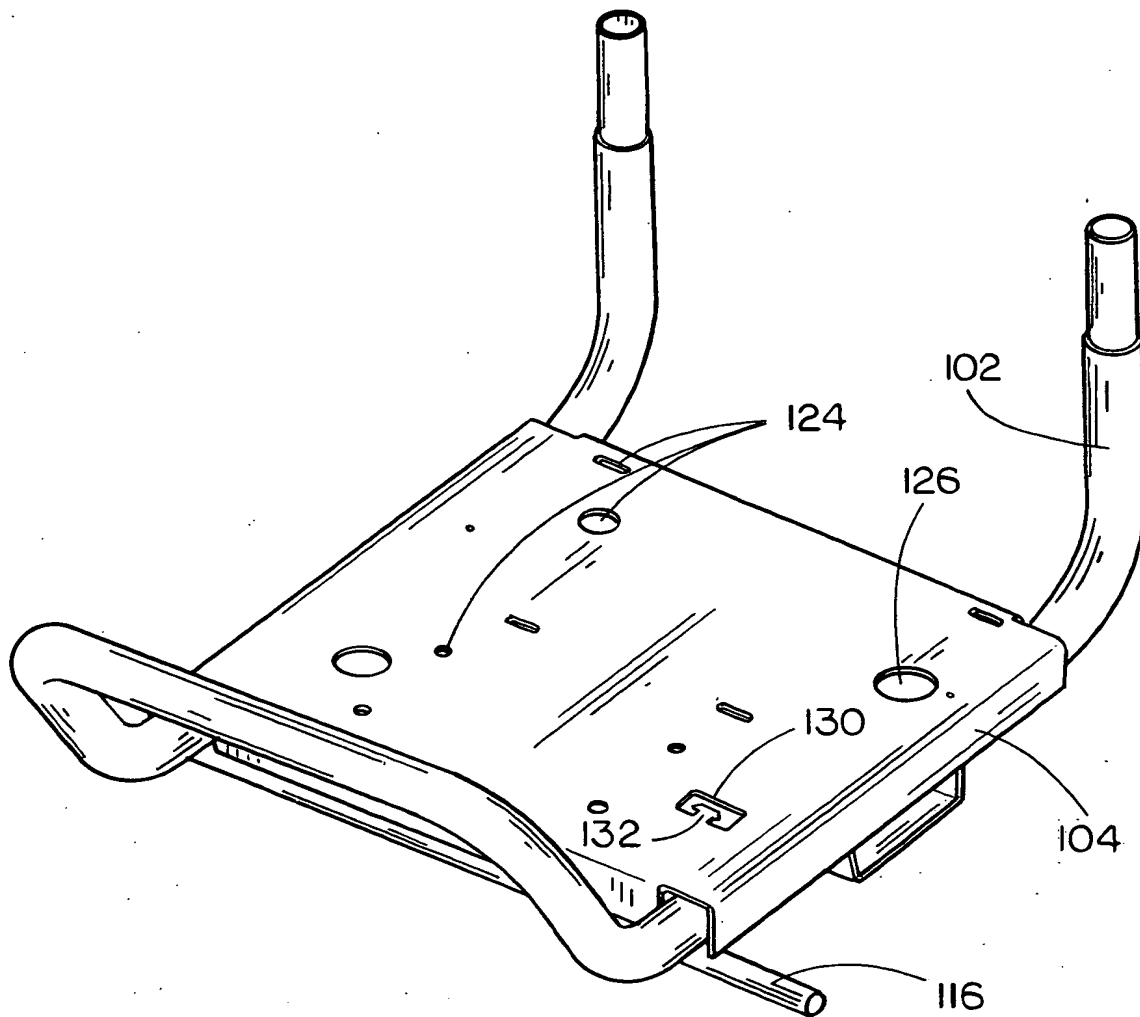


FIG. 17

10087899.030102

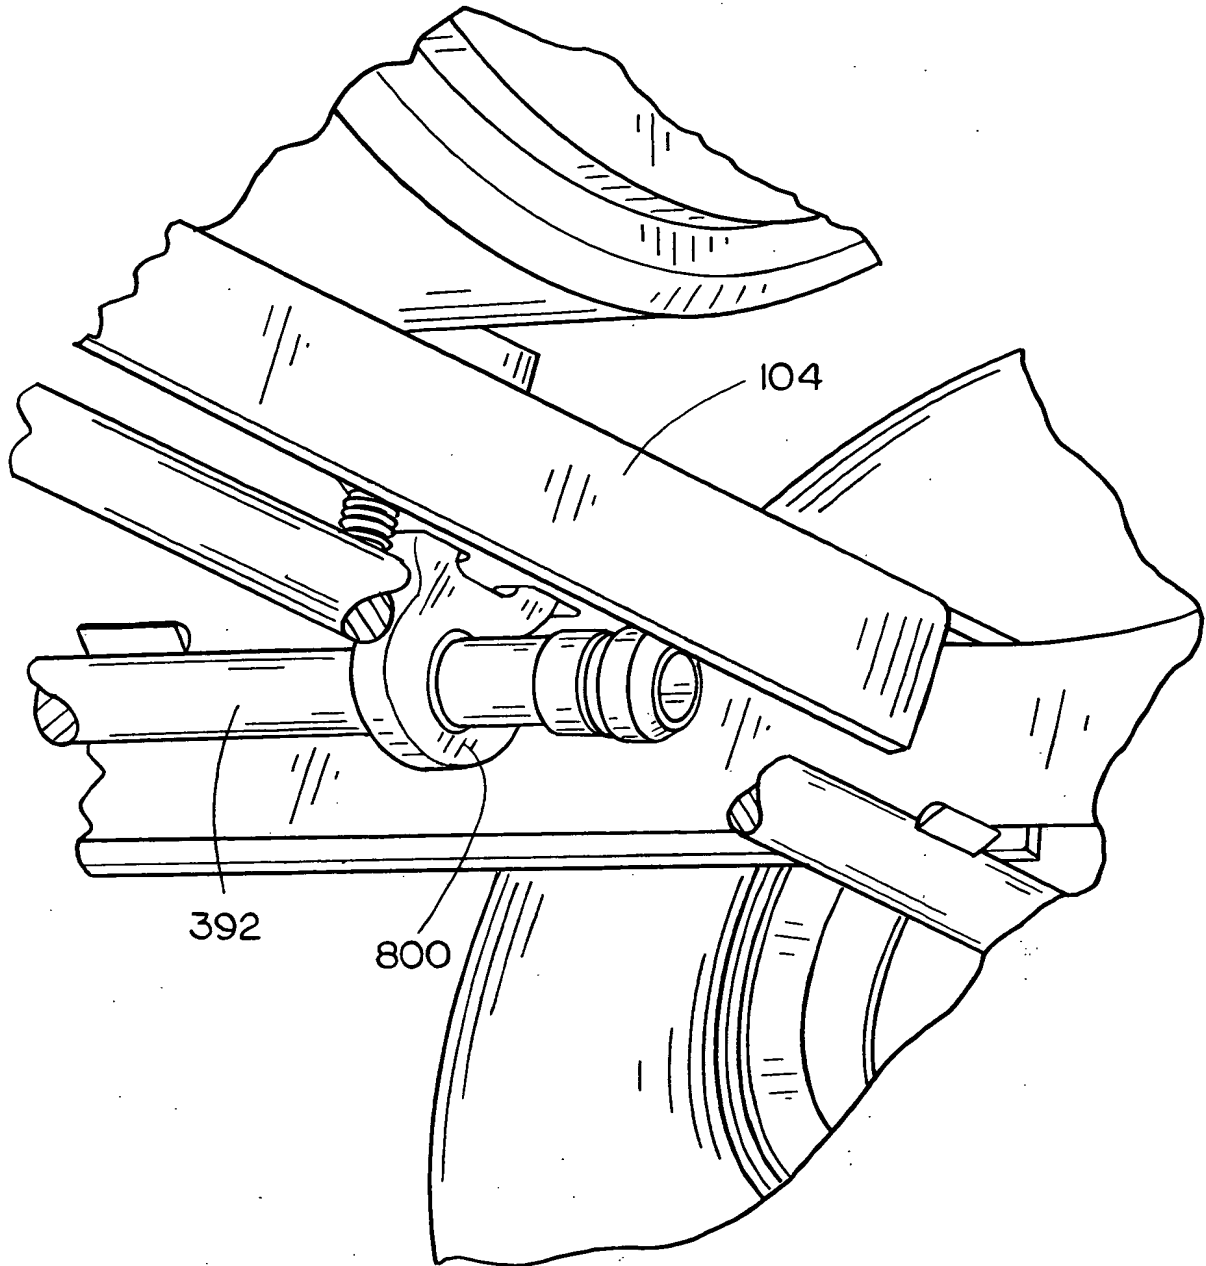


FIG. 18

10057899 030102

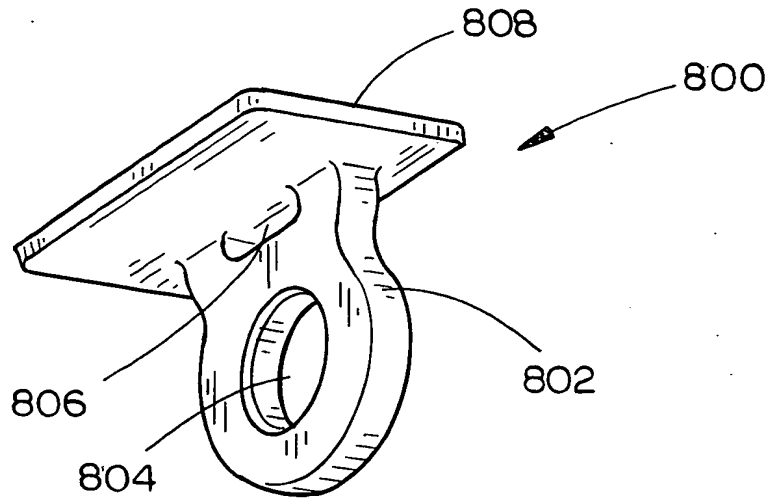


FIG. 19

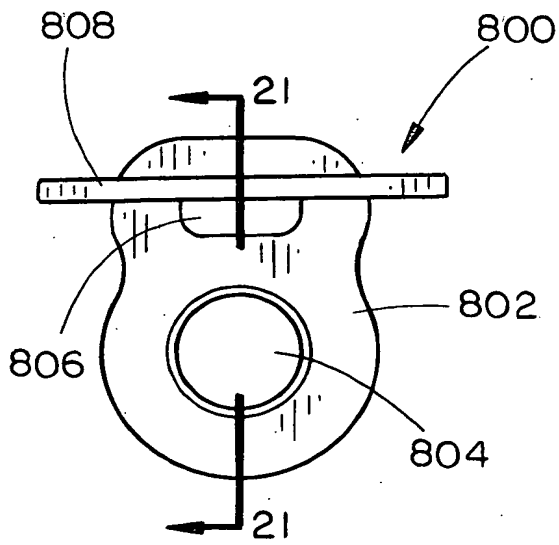


FIG. 20

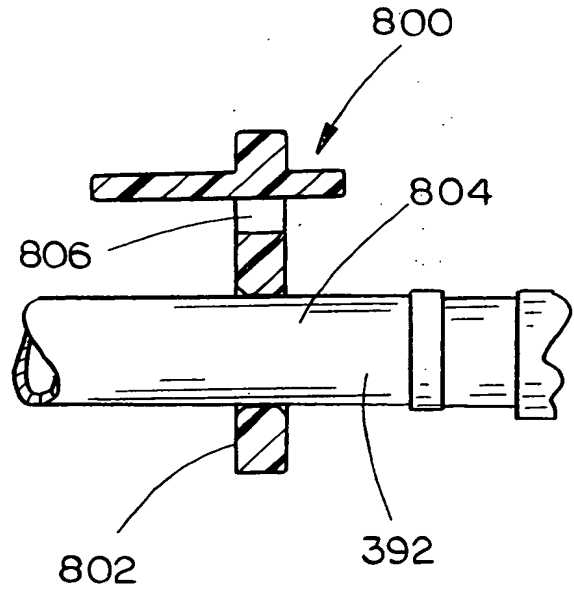


FIG. 21

201909 66328001